

Installation Notes

Taliaferro

Product: **Convertible Storage Bag Repair Spool Kit**

Part Number: **0106000**

Date: **06.17.2025**

Tools you will need:

Socket wrench set



Flathead screwdriver

Drill with 5/16 Bit

Pliers

Replacement spool kit (included: metal bushing, pin, clip)

Note: There are 2 versions of the setup, one with a clip and one with a rivet you will have to drill out and replace with the provided pin and clip.

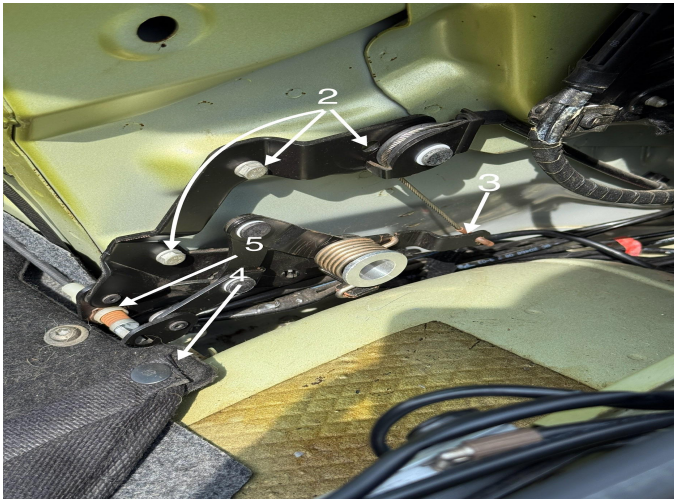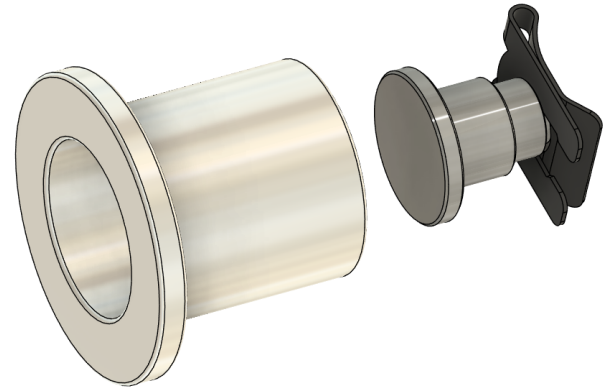

Step 1: Remove the Storage Bag Assembly Mechanism

Access the unit

1. Open the convertible top and access the storage bag area.
2. Remove the top bolts
Locate and remove three bolts on the top side of the unit.
 One of these bolts is attached to the pulley.
3. Disconnect the pulley wire
Carefully unhook the wire that connects the pulley to the rest of the assembly.
4. Remove bottom bolts
Peel back the carpet to expose and remove two bolts at the bottom of the assembly.
5. Detach the tension cable
Identify and disconnect the tension cable running into the assembly.

Taliaferro Imports, Inc.
525 N Prince Lane
Springfield, MO 65802 USA
417.831.7222 M-F 8-5 CST
Catalog@**GenuineSaab.com**

No Reproduction Permitted
Know the Dangers, Don't Learn by Accident!
If in doubt, consult a professional.

Step 2: Replace the Bushing

1. Remove the spring
Carefully remove the spring wrapped around the plastic bushing. You may have to use an extension to remove.
 Use caution to avoid injury.
2. Drill out the rivet or undo clip
To fully remove the plastic bushing, use a drill with a 5/16 bit to carefully drill out the factory rivet holding it in place or remove the clip and remove the pin.



3. Install the metal replacement bushing
Position the new metal bushing in place and align it with the drilled hole.
4. Secure with pin and clip
Insert the included pin through the bushing and fasten it with the retaining clip. Make sure it is fully seated and secure.
5. Reinstall the spring (We used a small socket and an extension for leverage.)



Step 3: Reinstall the assembly into the car.